Quick Start

Windows Phone 8X by htc

Get to Know Your Phone

Swipe left to see the apps list.

For more information, visit **att.com/DeviceSupport**

Set Up Your Phone

Inserting the SIM Card

① Insert the SIM eject tool into the small hole next to the SIM card tray.
② Pull the SIM card tray out, and place the SIM card (contacts facing down) into the tray.
③ Insert the SIM card tray into its slot.



Charging the Battery

① Connect the phone to the AC adapter using the USB sync cable.
② Plug the AC adapter into an electrical outlet to start charging.
- The notification LED is red and displays in the status bar when charging.
- The notification LED is green and displays in the status bar when charging is complete.

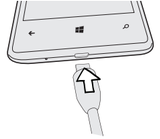

Your Microsoft® Account

Sign in or create a Microsoft account to:
- Get apps, music, and games from the Windows Phone Store.
- Back up your phone settings.
- Use Find My Phone to ring, lock, or erase your phone, or find it on a map.
- And more.

Find Apps or Music

① Tap the **Store** tile.
② To find things in the store:
- Scroll through the list.
- Browse the categories or genres.
- Tap , enter the app you're looking for, and then tap .

Connecting to a Wi-Fi Network

① On the Start screen, flick left and then tap **Settings > Wi-Fi**.
② Tap a Wi-Fi network to connect.
③ If required, enter a password and tap **done**.

Connecting a Bluetooth® Headset

① Make sure that the Bluetooth headset is discoverable. Please refer to its documentation.
② On your phone, flick left from the Start screen and tap **Settings > Bluetooth**.
③ Tap the slider to turn on **Bluetooth**.
④ Tap the device you want to connect to.
⑤ If required, enter the passcode for your headset.

Find More Information

On the Web

- Interactive web tutorials are available at **att.com/Tutorials**. Select Manufacturer: **HTC** and Model: **Windows® Phone 8X by HTC®** from the drop down menus.
- Detailed support information including device specifications, user guide, troubleshooting, user forums and knowledgebase articles are available at **att.com/DeviceSupport**.
- For information about your wireless account, service plan or network, visit **att.com/Wireless**.

On the Phone

Call AT&T Customer Care at **1-800-331-0500** or dial **611** from any AT&T mobile phone for assistance with your service or device.

Find Accessories

Accessories for your smartphone are available at **att.com/WirelessAccessories** or visit your local AT&T store.

Limited 4G LTE availability in select markets. 4G speeds delivered by LTE, or HSPA+ with enhanced backhaul, where available. Deployment ongoing. Compatible data plan required. LTE is a trademark of ETSI. Learn more at att.com/network.

Some features may require monthly access and/or per use charges. Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. All features, functionality and other product specifications are subject to change without notice or obligation. Contact your service provider for details. Accessories sold separately.

Microsoft, Windows, and the Windows logo are trademarks of the Microsoft group of companies. HTC and the HTC logo are trademarks of HTC Corporation. © 2012 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property. All other marks contained herein are the property of their respective owners.

Customize Your Windows® Phone 8X by HTC®

You can pin all sorts of things to the Start screen, including apps, websites, map locations and even contacts. When you pin a contact to the Start screen, you'll get all of that person's feed updates—right from that tile.

- To pin most things, tap and hold the item until the menu appears, or tap •••, then tap **pin to start**. For others, you can just tap ⊘.
- To move, remove, or resize a Tile, press and hold it. You can drag it to a new location, tap ⊘ to resize, or tap ⊘ to remove it.

Choose Your Color

① On the Start screen, flick left and then tap **Settings**.
② Tap **theme**, then tap the **Accent color** box or **Background** box to choose your look.

Change Your Wallpaper

① On the Start screen, flick left and then tap **Settings**.
② Tap **lock screen**.
③ Tap the **Background** box to pick a wallpaper.

Pick Ringtones and Sounds

① On Start, flick left to the App list, then tap **Settings > ringtones + sounds**.
② Tap the type of ringtone or alert you want to change, then choose the sound you want to use.

To change a ringtone for a contact:

① On Start, tap the **People** tile, then flick to All.
② Tap the contact you want to change, then tap ⊘.
③ Tap ringtone, then tap the ringtone you want to assign.

Notifications

Pick the notifications that show on the lock screen:

- Phone calls and voicemails
- Text messages
- Email messages
- And more.

To set the lock screen notifications:

① On the Start screen, flick left and then tap **Settings**.
② Tap **lock screen**.
③ Tap the **Choose an app to show detailed status** box to set your detailed notifications.
④ Tap the **Choose apps to show quick status** boxes to set the short notifications.

Text Messages*

① Tap the **Messaging** tile.
② Tap ⊕ to compose.
③ Enter recipients in the **To** field. You can:

- Enter phone numbers or contact names. Select any matching contacts from the drop-down list. Use semicolons to separate recipients.
- Tap ⊕ and select names from your contact list.

④ Tap the message callout and compose your message.
⑤ If desired, tap ⊘ to attach a photo.
⑥ Tap ⊘ to send the message.

Please don't text and drive.

* Pay-Per-Use rates apply, if you don't have a Messaging Plan.

Calls and Voicemail

Making a Phone Call

① Tap the **Phone** tile.
② Tap ⊘.
③ Tap the desired phone number.
④ Tap **call**.

- To adjust the in-call volume, press the volume control buttons.
- To end the call, tap **end call**.

Note: If you've added contacts to your phone, you can make a call from the People hub.

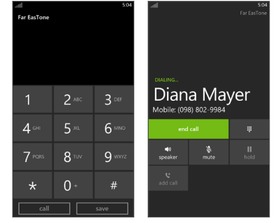

Checking your Voicemail Messages

From your phone

① Tap the **Phone** tile.
② Press and hold the number **1** key.
③ If you've set up a voicemail passcode, enter the passcode when asked.
④ Follow the voice prompts.

From other phones

① Dial your 10-digit phone number.
② Tap the ***** key when you hear your personal greeting.
③ Enter your personal password.
④ Follow the voice prompts.

Contacts

Get Your Contacts on Your Phone

Adding your email accounts and social network is the easiest way to get your contacts set up on your phone.

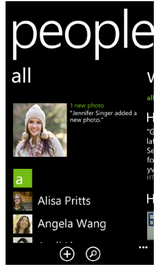

To set up an account:

① On the Start screen, flick left and then tap **Settings**.

② Tap **email + accounts**.

If you need help getting other sorts of contacts on your phone, go to WindowsPhone.com.

Adding a New Contact

① Tap **People**.

② On the **all** screen, tap ⊕ and then select the account where you want to store the contact information.

③ Tap an item such as **name** or **phone** to enter the information.

④ Tap ⓐ when finished.

Adding a Contact from Your Call History

① Tap **Phone**.

② On the **history** screen, tap the number you want to add.

③ Tap ⊕ to create a new contact.

Note: You can also add the number to an existing contact by tapping a contact.

Rooms and Groups

Rooms let you chat and share with a group of your contacts. Groups let you see updates from members and easily send email or text messages to them.

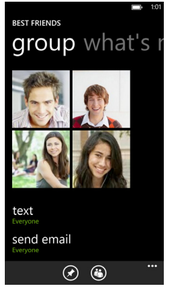

To create a Room or Group:

① Tap **People**, flick to **together**, then tap ⊕.

② Tap either **Room** or **Group** and follow the instructions.

To edit a Room or Group:

① Tap **People**, then flick to **together**.

② Tap the Room or Group you want to edit.

③ Tap ••• to see your editing options.

Social Networking

When you sign into a social network, your friends' status updates appear in the People hub.

① To sign into an account, flick left from the Start screen, and then tap **Settings** > **email+accounts**.

② Tap **add an account**, and then choose the social network you want to sign into.

Email

Your device supports POP3/IMAP, web-based, and Microsoft Exchange* email accounts.

Set up Email Accounts

① On the Start screen, flick left and then tap **Settings > email + accounts > add an account**.

② Tap the account you want to set up. If you don't see the account you want to set up, tap **other account** or **advanced setup**.

③ Enter the email address and password, then tap **next** or **sign in**.

④ A tile for your email account will be added to the Start screen.

Note: To view all your email accounts in a single inbox, tap ••• **> link inboxes**.

Send Email

① Tap the email tile you want to use.

② Tap ⊕ to create a new email message.

③ Enter recipients in the To field. You can:

- Enter email addresses or contact names. Select any matching contacts from the drop-down list.
- Tap ⊕ and select names from your contact list.

Note: Tap ••• to add cc and bcc lines and change the email priority.

④ Enter the email subject then tap the space below the subject line to compose.

⑤ Tap ⓐ to add an attachment.

⑥ Tap ⓐ to send.

* Corporate email requires an Enterprise Data Plan.

Camera

Take a Picture

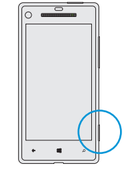

① Press the **Camera** button on the side of the phone.

② Press the **Camera** button halfway to focus on your subject, and then press it all the way down to take the shot.

③ Before you take the shot, you can:

- Spread or pinch to zoom in or out.
- Tap ••• to change the resolution.

Record a Video

① Press the **Camera** button.

② Tap ⓐ to switch to video mode.

③ Press the **Camera** button to start recording video.

④ Press the **Camera** button again to stop recording.

⑤ Flick right to watch the video right away.

Note: Tap ⓐ to take a picture or video of yourself.

Share a Picture or Video

① After capturing a picture or video, flick right to see the photo or video you've just captured.

② Press and hold the photo or video and tap **share**.

③ Select how you want to share the photo or video.

Web

Internet Explorer

① Tap the **Internet Explorer** tile.

② Tap the address bar and enter a website address, and then tap →.

- To bookmark a web page, tap **••• > add to favorites**.
- To open, swap, or close tabs, tap **••• > tabs**.

Navigate

Rotate your phone to view the web page in landscape view. Use finger gestures to move around on the web page.

Zoom

Double tap to zoom in or out.
You can also spread and pinch to zoom.

Search and Do with Bing

① Press 🔍 from any screen (except the lock screen).

② You can:

- Type in the search box, then tap → on the onscreen keyboard.
- Tap 📍 to see places to eat, drink, shop, and visit nearby.
- Tap 🎵 to identify songs and get them at the Windows Phone Store.
- Tap 👁 to scan barcodes, QR Codes, Microsoft Tags, books, magazines, and more to get more information or translations.

Note: You can also tap 🎤 to say what you're looking for.

Keep Your Kid Entertained

Use Kid's Corner to keep your kid entertained while keeping your phone secure.

① On the Start screen, tap **Kid's Corner**.

② Add any game, music, video or app on your phone.

③ Tap **launch kid's corner** to activate it.

④ To leave Kid's Corner, press the phone's **Power** button.

Note: Add a lock screen password just in case your kid figures out how to leave Kid's Corner.

Get More Stuff

When you go to WindowsPhone.com and click My Phone, you can find and get apps and games at the Windows Phone Store on the web and then easily add them to your phone. You can also set up Find My Phone, where you can ring, lock, erase, or find your phone on a map, all for free.
Explore more at WindowsPhone.com.

Beats Audio™

When you plug in your headset, Beats Audio is automatically enabled to give you an enhanced sound experience.

① To turn Beats Audio on or off, flick left from the Start screen, and then tap **Settings** > **Beats Audio**.

② Tap the **on/off** switch to turn Beats Audio on or off.

Keep in Sync

It's easy to get your photos, videos, music, documents, and more from your computer to your phone (and vice versa).

If you have a Windows PC:

- Plug your phone into the computer with the cable and follow the instructions on your PC.

If you have a Mac:

- Get the Windows Phone app from the Mac App Store.

Set up backups on your phone to:

- Automatically upload your photos and videos to SkyDrive so you can see them from anywhere you can access the web.
- Sync your SMS and MMS messages to Hotmail so you have a backup, just in case.
- Create backups of your phone's settings, including the list of apps you've installed, your theme color, Internet Explorer favorites, accounts, and more.

On the Start screen, flick left and then tap **Settings** ⚙ > **backup**.

AT&T Services

AT&T myWireless: Access billing, usage, and feature information and manage your account from the palm of your hand.

AT&T Code Scanner: Reads UPC, QR and Data Matrix barcodes. Scan, Shop, Save.

AT&T Navigator®: Get traffic updates, GPS navigation, and turn-by-turn voice directions.

AT&T Radio: Bring hundreds of radio stations anywhere you go.

AT&T U-verse Mobile: Download available shows from the Mobile Library and watch them on your phone.

Note: To learn more about using these services on your device, visit att.com/DeviceSupport.

Subscription charges may apply. U-verse Mobile: Access to select content requires qualifying U-verse TV plan or monthly subscription fee, and Wi-Fi connection and/or cellular data connection. Available content may vary by device and/or U-verse TV subscription and is subject to change. Data charges may apply.

Data plan required. Location services must be enabled and Wi-Fi required for some features and services. Carrier fees apply. Some features and services may vary by area, phone, carrier, plan, and version of Windows Phone software. Some apps and services sold separately.